 
 


# INSTALLATION INSTRUCTIONS FOR THE CD/DVD SHELF ASSEMBLIES

## CZ2-72001 A-FRAME DOUBLE SIDED CD/DVD SHELVES ASSEMBLY INSTRUCTIONS

1. The Single CD/DVD shelf **CZ4-0648** should be installed first by placing the single shelf arm bracket **CZ4-0601** into the 4th **inside** slot from the top of each post.
2. Drop the CD/DVD shelf onto the arm brackets and make sure the side tabs fit securely on the **outside** of the arm bracket.
3. Insert one Wire Metal Divider **CZ4-0606** into the **outside** slots of the shelf.
4. Place the Acrylic Strip **CZ4-4803** into the trough at the front of the shelf.
5. Add the remaining CD/DVD shelves in the same manner as the first, skipping one (1) slot between shelves.

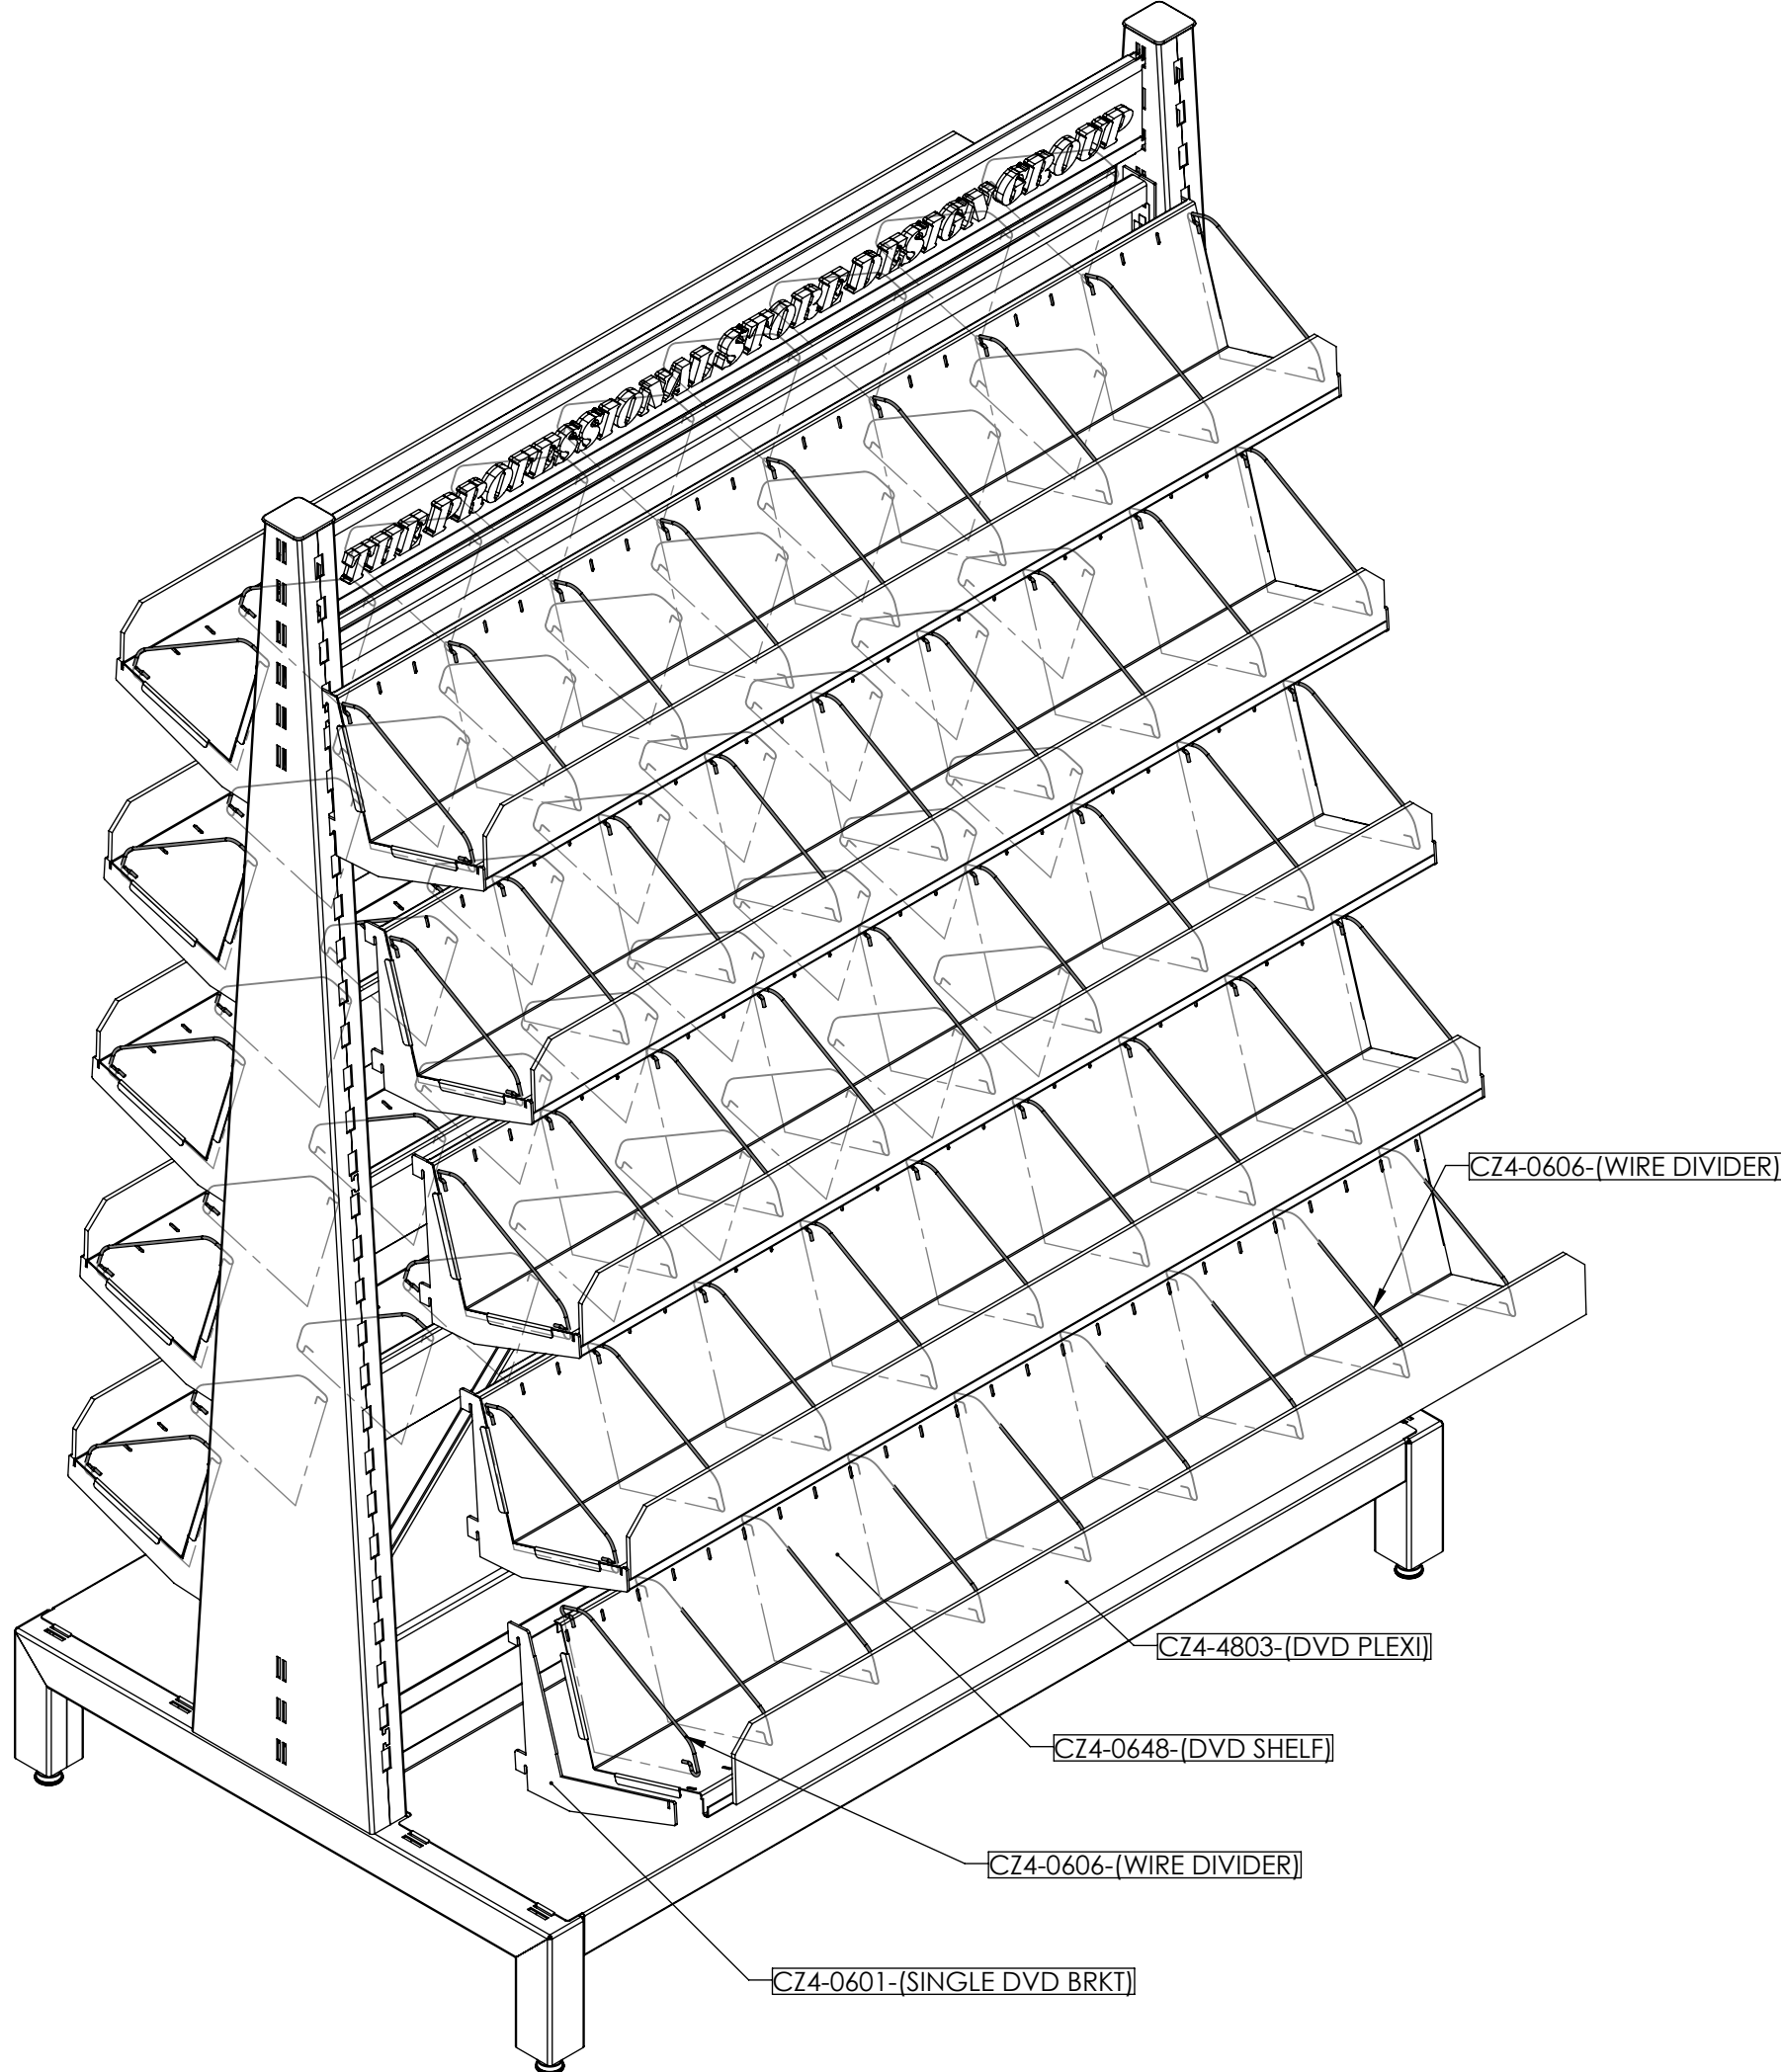

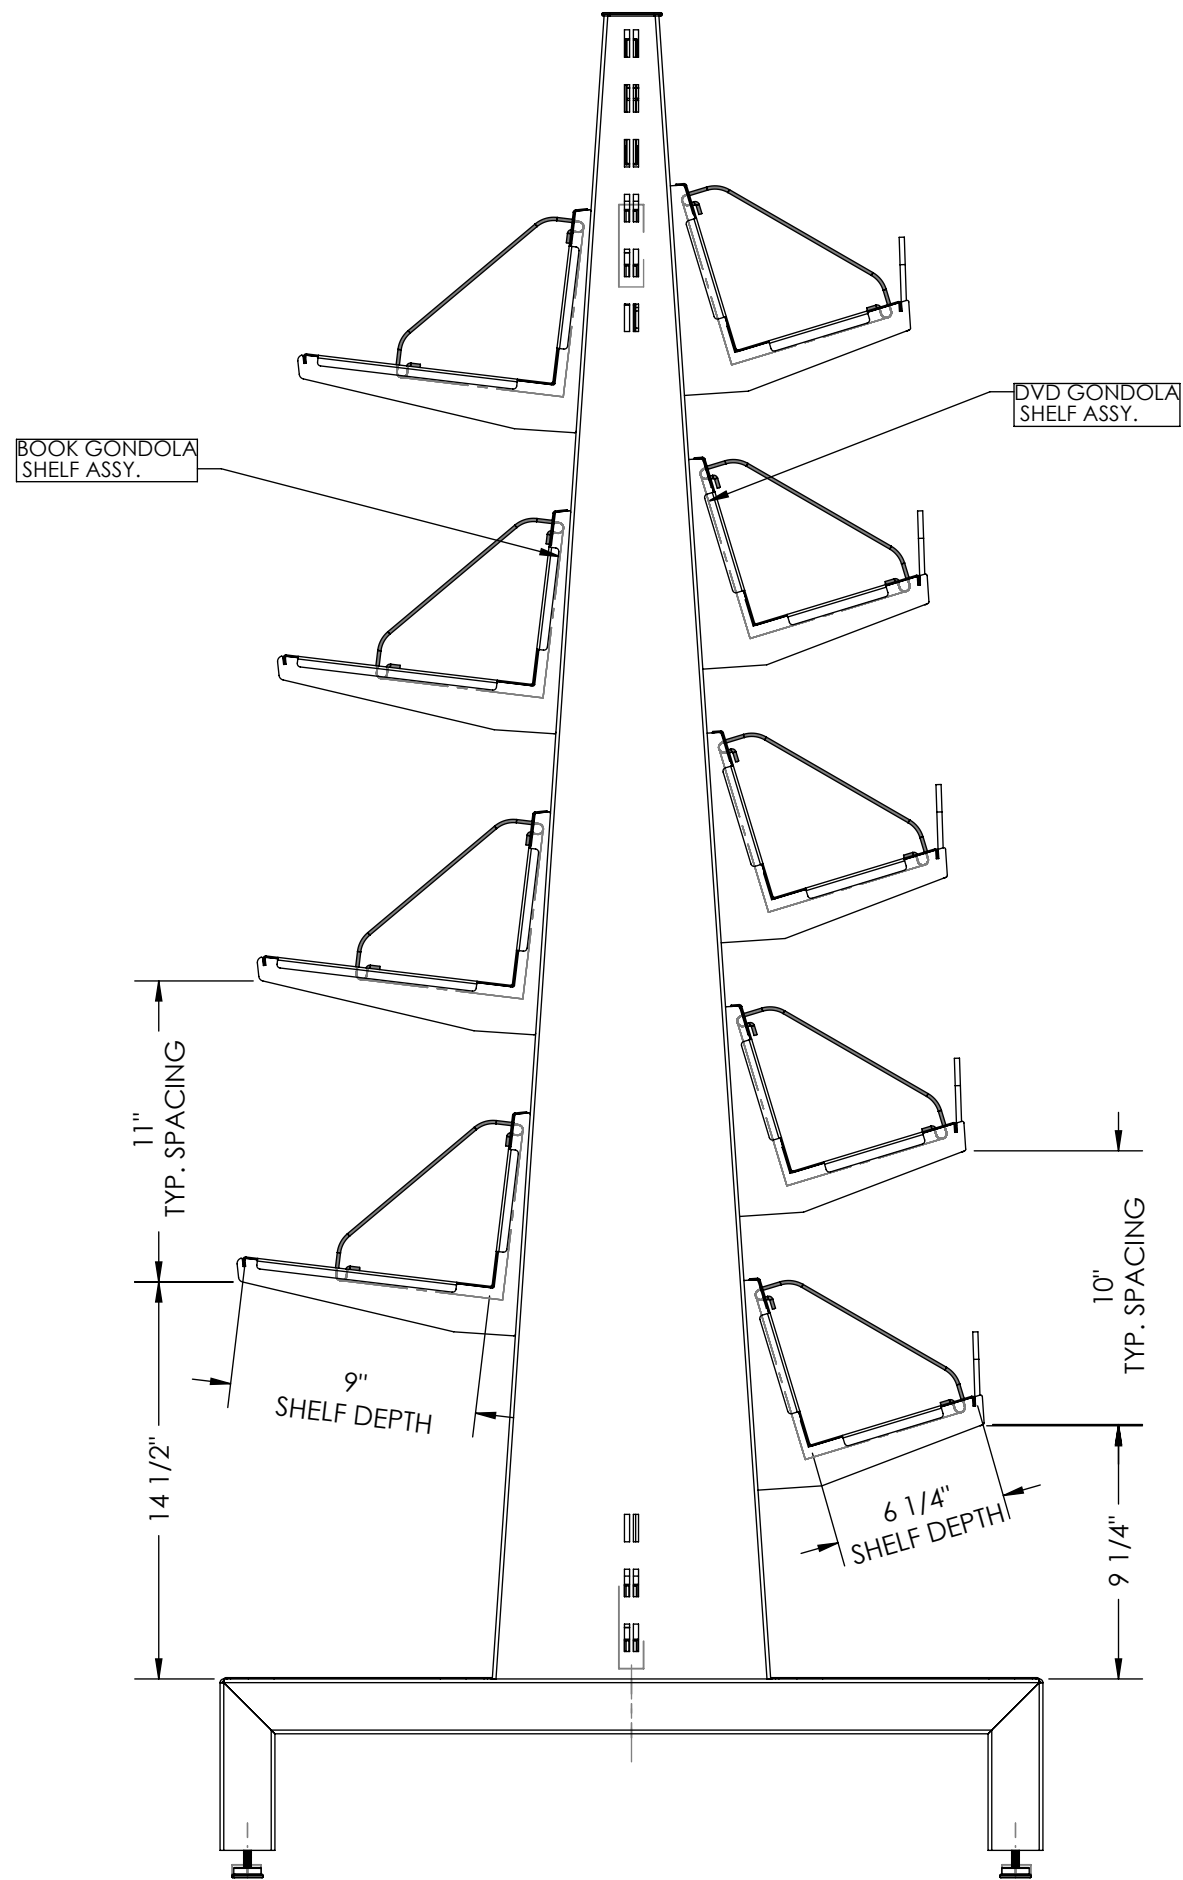

### SHELF ASSEMBLY NOTES

INSTALL ALL SHELVES STARTING FROM THE 4TH SLOT FROM THE TOP OF THE POST.

BY SKIPPING (1) ONE SLOT FOR ECERY DVD SHELF ASSY YOU CAN MAINTAIN A SPACING OF 10"

BY SKIPPING (1) ONE SLOT FOR ECERY BOOK SHELF ASSY YOU CAN MAINTAIN A SPACING OF 11"

# INSTALLATION INSTRUCTIONS FOR THE BOOK SHELF ASSEMBLIES

## CZ2-73001 A-FRAME DOUBLE SIDED BOOK SHELVES ASSEMBLY INSTRUCTIONS

1. The Single BOOK shelf **CZ4-09648** should be installed first by placing the single shelf arm bracket **CZ4-0901** into the 4th **inside** slot from the top of each post.
2. Drop the Book shelf onto the arm brackets and make sure the side tabs fit securely on the **outside** of the arm bracket.
3. Insert one Wire Metal Divider **CZ4-0606** into the **outside** slots of the shelf.
4. Add the remaining Book shelves in the same manner as the first, skipping one (1) slot between shelves.
5. Refer the Shelf Notes for additional information.

