


BR40747 SIGN HOLDER BAR

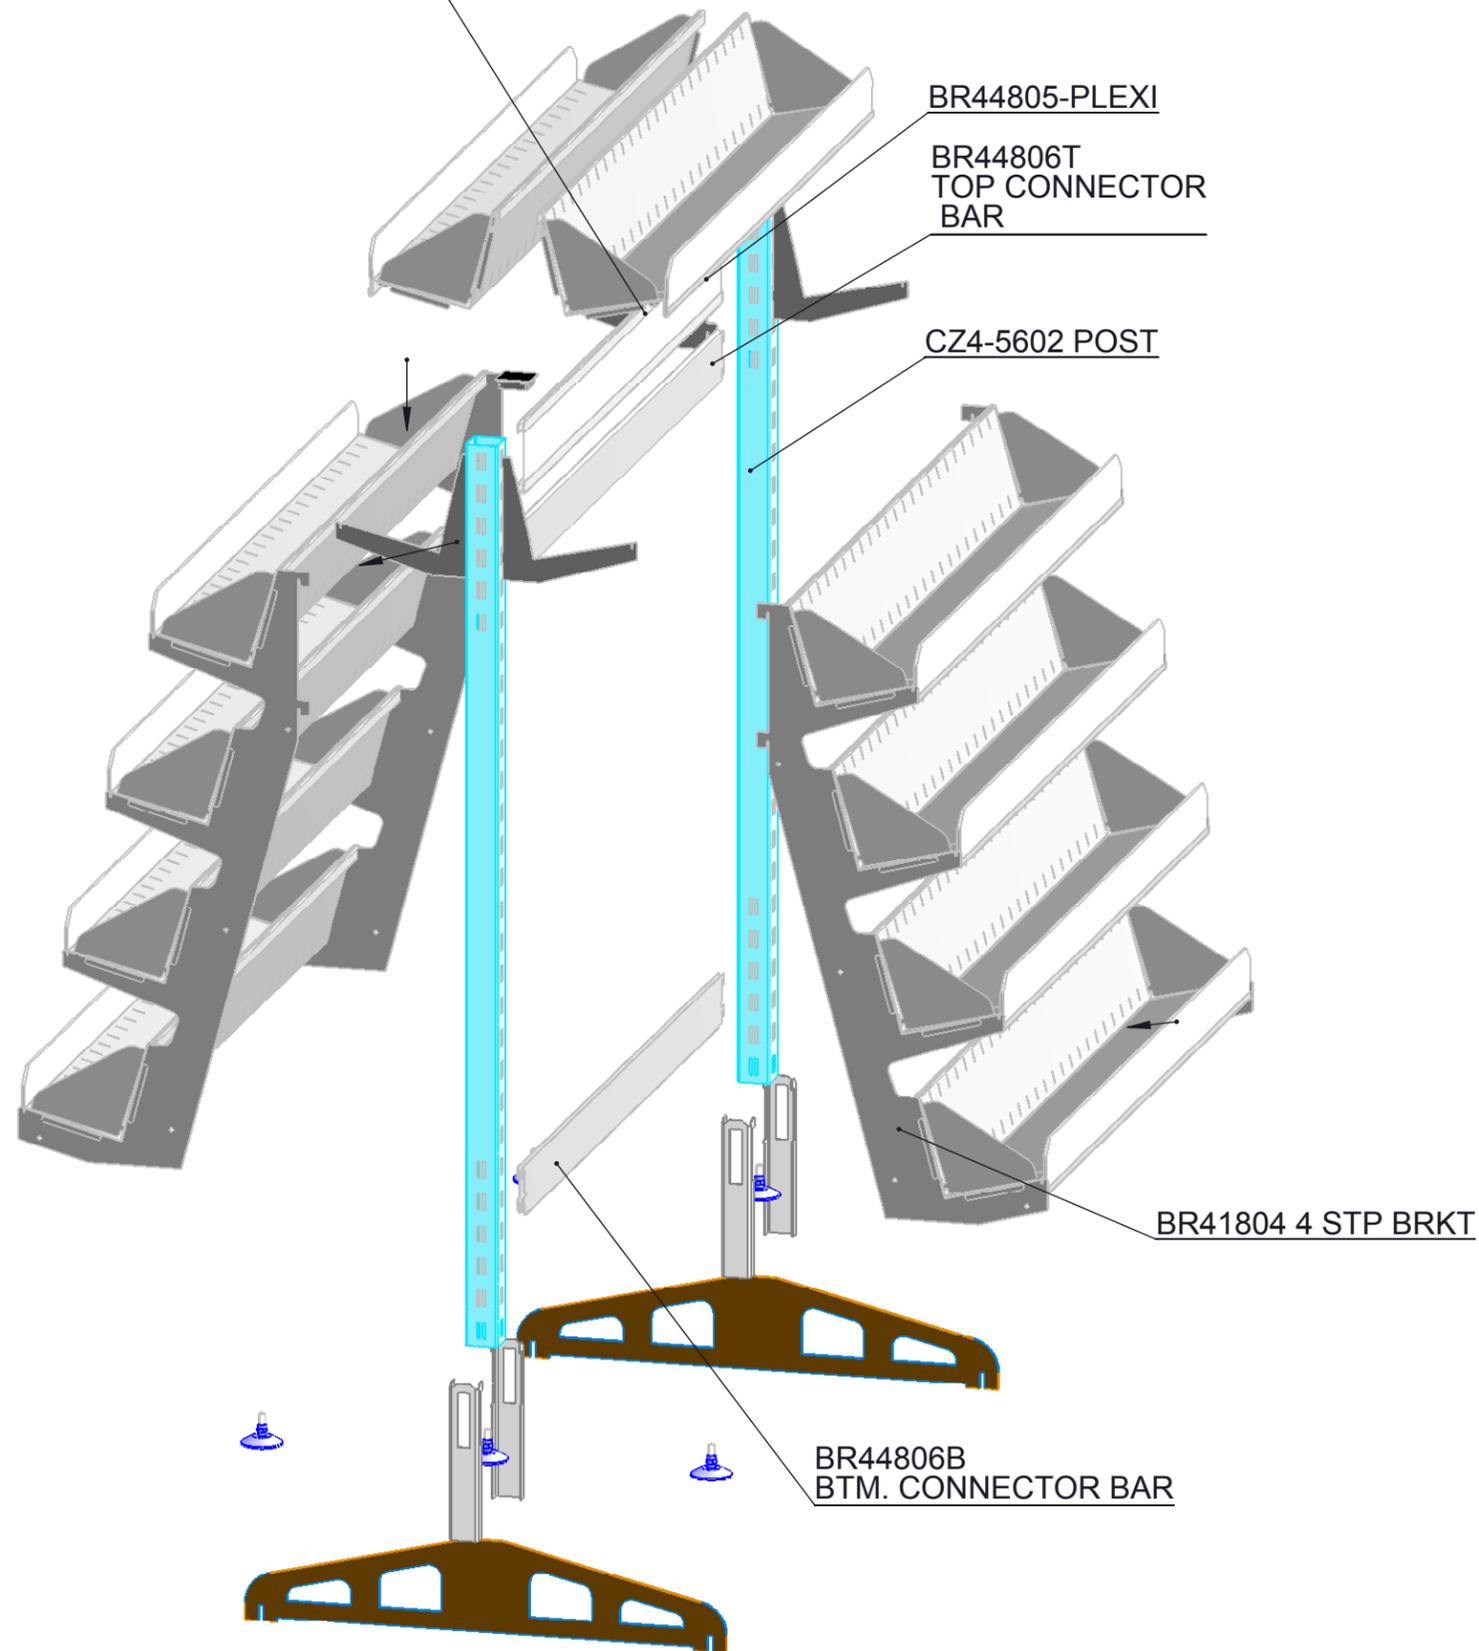

### BR24001 DOUBLE SIDED GONDOLA STARTER Installation Instructions for the Gondola frame assembly.

1. Attach a Foot Bar **BR41906 assy.** to both sides of the Post **BR46302**. Make sure the foot is inserted into the side with the slots going the full length of the post. The bottom of the foot leg must fit level with the bottom of the post.
2. Insert the Bottom Connector Bar **BR44806B** into the post with the gap facing up and the hooks facing down. Use the 6th slot from the bottom. Insert the Top Connector Bar **BR44806T** with the gap facing down and the hooks facing down into the 4th slot from the top.
3. Attach another complete post and foot assembly to the other end.
4. Drop the base deck **BR44818** onto the feet by inserting the side tabs into the slots on the top of the foot bars. Now you can secure the connector bars by turning the white plastic thumb levelers to the locked position. Do not do this step before installation of the base decks or you may experience difficulty installing the base decks.
5. Insert one of the sign holder bars **BR40747** into the 3rd slot from the top of the post with the gap facing up.
6. Place two clear sign holder plexi pieces **BR44805** into the bottom bar and then add another sign holder bar with the gap facing down into the first slot so that the plexi is held in place between the two.
7. Insert the post cap **BR40202** into the top of the posts. If you are adding additional sections to the starter it is recommended that you construct all of the frame assemblies and level them in the desired place before adding the shelf assemblies.

